

# Passionate about Scout Cart®



Congratulations on becoming a Scout Cart® owner. You'll come to identify Scout by its fine engineering, precise construction, quality materials and ease of use. You will love the many ways Scout Cart® enhances your daily life, saving you valuable time and energy. Read this [User Guide](#) to learn about key features and for your safety and long-term enjoyment of the Scout Cart®.

**CAUTION: Scout Cart® is not designed to transport children. DO NOT ALLOW CHILDREN to ride on the frame or in the baskets.**

## Attaching the Rear Wheels

Leave the frame in the folded position to attach the rear wheels. Each rear wheel has a metal pin protruding from the center hub (Fig. 1.) Insert the wheel pin into the pin receptor located on the rear wheel arm (Fig. 2). Do the same with the second rear wheel. If the pin does not slide easily into the receptor, press the wheel release button near the attachment point (Fig. 3). Push the wheel. It will lock into place.



Figure 1



Figure 2



Figure 3

## Attaching the Front Wheels

Leave the frame in the folded position to attach the front wheels. Insert the front wheel assembly (Fig. 4) into the receptor on the frame. If the pin does not slide easily into the receptor, press the button on the frame near the attachment point.

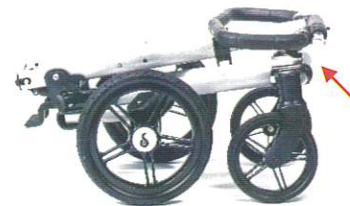


Figure 4

## Detaching the Front and Rear Wheels

Press the wheel release buttons by the attachment points on the left and right rear wheels to release (Fig. 3). Release the front wheels by pressing the grey buttons on the frame near the attachment points.

# Scout Cart® Walk There.

## Unfolding the Frame

Unfold the frame by grasping the base of the handle and lifting. The back wheels will expand. Next, press the frame release button (Fig. 8) and pull upward to raise the telescoping frame. The telescoping frame is correctly positioned when the lock pin protrudes slightly from the top hole on the side of main frame (Fig. 6).

Lock Pin in  
Main Frame

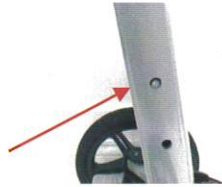


Figure 6.

## Adjusting & Locking the Handle

The handle is adjusted and locked into place by the metal thumb lever (Fig. 7). Place the handle in your preferred position, then push the thumb lever down to lock the handle in place. To lower the handle, lift the thumb lever.



Figure 7.

Telescoping  
Frame  
Release  
Button



Hook  
&  
Lock

Figure 8.

## Attaching and Removing the Top Basket

Align the wide opening along the rim of the smaller basket with the hook on the cart front (Fig. 8). Press the basket rim into the hook and lock. Next, fit the top basket base into the mounting bracket on the main frame.

To remove the top basket press the lock tab above the basket hook downward. While the basket at both ends, lift upward.

## Attaching and Removing the Bottom Basket

To attach the bottom basket, first release the lock mechanism by pushing the PRESS button on the cart front (Fig. 9). Place the basket under the hooks near the main frame. Next, align the basket wire with the groove on the lock mechanism and then push the sliding lock shut. The basket is locked into place when the PRESS button and the sliding lock align. To remove the bottom basket, push the PRESS button. Slide the basket out of the rear hooks and lift.

Sliding Lock  
& Release  
Button

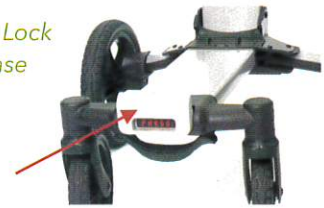


Figure 9.

## Using the Foot Brake

Press downward on the foot brake to engage the lock. Press again to release the lock. Engage the brake before folding and storing the cart to prevent it from rolling.

## Locking the Folded Frame

Lock the folded frame to store the Scout Cart in a standing position. After folding the frame, grasp the handle near the thumb lever and pull the telescoping section forward until the upper basket hook (Fig. 8) locks into the lower basket bracket (Fig. 9). To unlock the folded frame, press the frame release button, which allows the telescoping section to slide out of the locked position.

**Important: Do not push the telescoping frame release button (Fig. 8) when the top basket is attached to the cart. Always remove the top basket before lowering the telescoping frame section.**

# Passionate about Scout Cart™



**Supplies, Grocery, Hardware**



**Office, Medical, Campus, Home**



**Compact Folding Frame**



**Quick-Release Steel Baskets**

Scout Cart™ is a new multi-purpose cart designed for transporting goods in walkable places, such as downtown neighborhoods near grocery stores, farmers markets and shops. It is also ideal for moving goods throughout large office buildings, medical campuses, schools, and home to store. Scout Cart™ is superior in materials, design and construction to other shopping/utility carts on the market. If you are looking for the best, you've found it!

# Scout Cart™ Walk There.

## Key Features

- Telescoping Anodized Aluminum Frame;
- Steel Pivot Points and Reinforcement plates;
- Adjustable Steel Handle with Comfort Grip;
- Two Powder Coated Steel Baskets;
- Basket Receptors
- Basket Release Button
- 10" Rear Wheels w/Rubber Tires (Removable);
- 7" Front Swivel Wheels/Rubber Tires,
- Foot Brake

## Specifications

Cart Unfolded: 40"H x 24.5"L x 25"W

Handle Height: 38" to 42"

Cart Folded: 12.5"H x 19"L x 17.5"W

Lower Basket: 19.5"L x 15"W x 8.5"H

Upper Basket: 19"L x 14"W x 8"H

Front Wheels: 7" Diameter, Width 1 3/4"

Rear Wheels: 10" Diameter, Width 2"

Allison White  
Scout Cart Founder  
allison@scoutcart.com  
410-919-3479

## Pricing Terms

MSRP: \$249.00

Wholesale: \$185.00 (discount on orders of 6+ units)

Shipping: UPS, FedEx, LTL. Customer's Carrier Accepted.

Warranty: One year on parts, materials and workmanship.

UPC: 8670040002

SKU: SCV1

## Construction

Extruded Aluminum, Steel Reinforcement Plates on Polypropylene, Powder-Coated Steel w/Welds.

Weight Capacity: 100 lb.

Color Finish: Silver and Black, Paint

Weight (Frame): 19 lb.

Weight (Basket): 4 lb.

Wheel Type: 4 Wheels, 2 Front Swivel, Rubber

Capacity Cubic Feet: 2.68

Package Quantity: 1

John Cunningham  
Scout Cart COO  
john@scoutcart.com  
443-608-0472

The Cargo Cart Company LLC, 920 Old County Road, Severna Park, Maryland 21146

[www.scoutcart.com](http://www.scoutcart.com)